


# Canister

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


## 4. Canister

### A: REMOVAL


- 1) Set the vehicle on a lift.
- 2) Disconnect the ground cable from the battery.
- 3) Lift up the vehicle.
- 4) Remove the clip holding the harness.

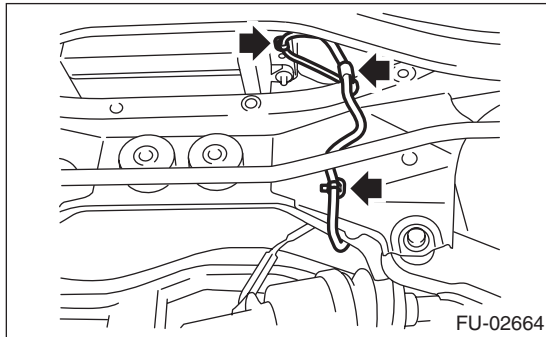

- 5) Remove the rear suspension assembly. <Ref. to RS-17, REMOVAL, Rear Sub Frame.>
- 6) Disconnect the evaporation hose (A) and connector (B).

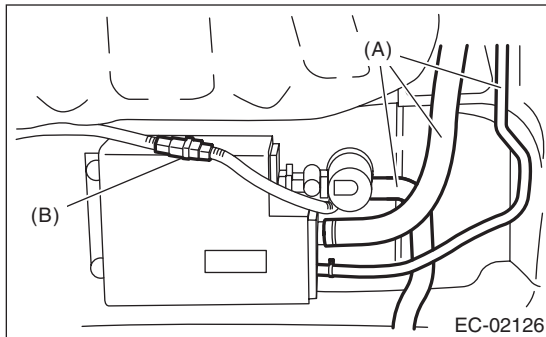

- 7) Remove the canister from body.

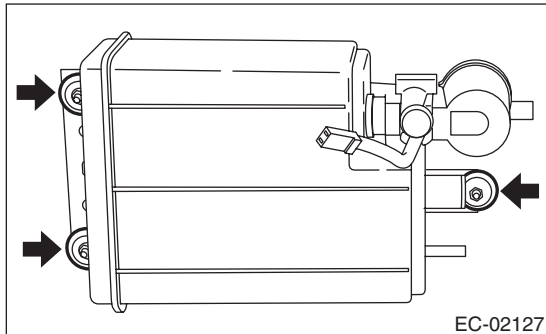


### B: INSTALLATION

Install in the reverse order of removal.

#### **Tightening torque:**

**8.0 N·m (0.82 kgf-m, 5.9 ft-lb)**

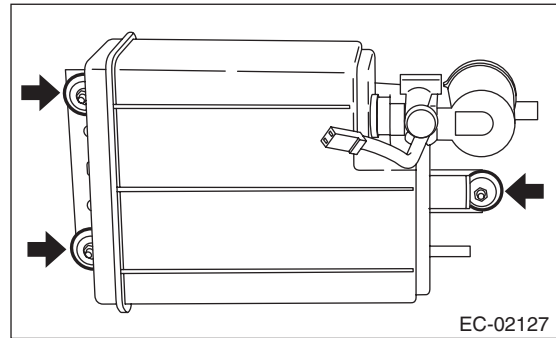

### C: INSPECTION

Make sure the canister and canister hoses are not cracked or loose.